

MULTI WAY AUDIO AND VIDEO

12 WAY AUDIO DOOR ENTRY KIT

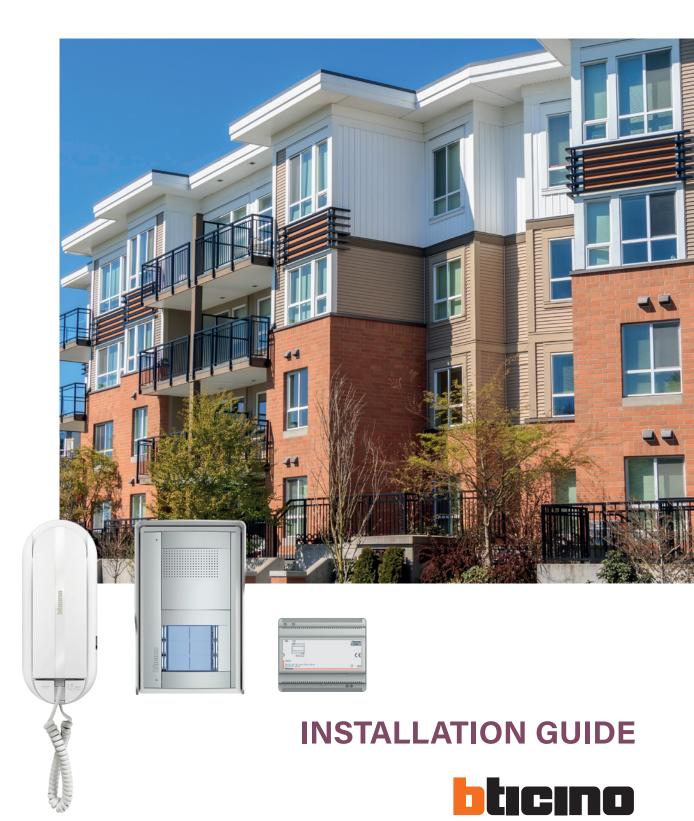

A brand of 🛱 legrand®



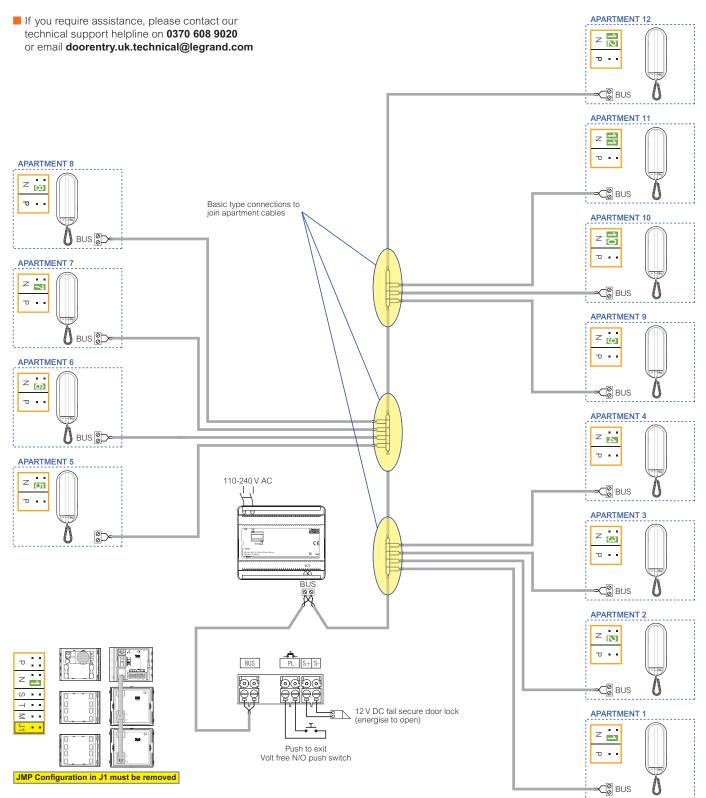

We recommend Bticino cable Cat. No. 3369 04, see guidance notes for usage of different cable types BUS cable connections are non polarised meaning the cable cores can be terminated in either connection terminal

ALL CONFIGURATION SHOULD BE DONE WHILE THE SYSTEM IS POWERED OFF!

N

STM

000


000

Configuration should match the image

for this system


ENTRANCE PANEL CONFIGURATION

Mic/Speaker adjustment Orange adjustment tool provided with speaker module

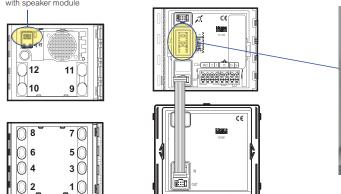

Push button layout


EXAMPLE HANDSET CONFIGURATION

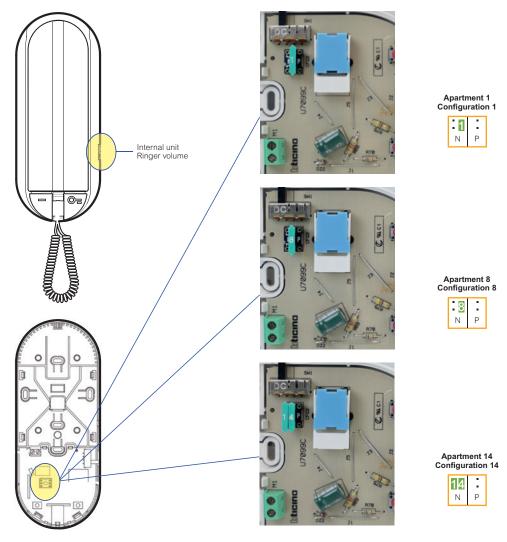




DOOR LOCK WIRING EXAMPLES


EXAMPLE 1 - Fail secure door dock (energise to open)

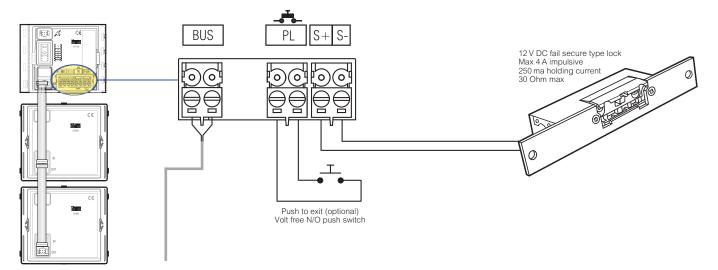

EXAMPLE 2 - Fail safe door dock (de-energise to open)

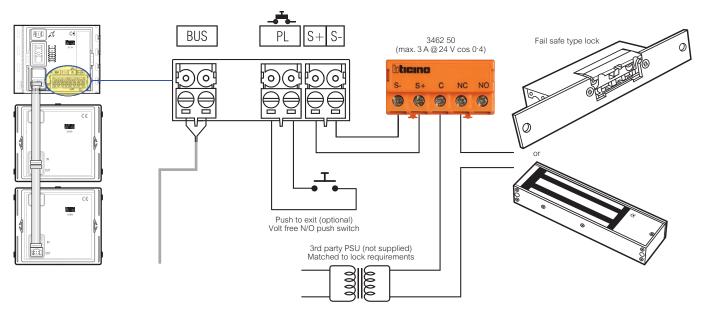

 $\mathsf{EXAMPLE}\xspace{3}$ - Motorised gates / 3rd party proximity

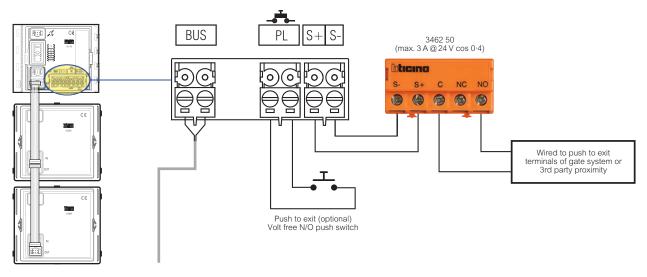


A brand of **legrand**®

ENTRANCE PANEL MOUNTING AND CABLING GUIDELINES

BACKBOX SIZES


Surface mounting backboxes with in-built rainshields

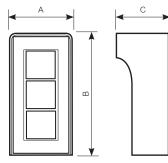

| Dimensions (mm) | | | | | |
|---|-----|-----|----|--|--|
| Cat. Nos. | Α | В | С | | |
| BT4WAKIT | 151 | 151 | 82 | | |
| BT4WVKIT BT6WVKIT BT6WAKIT BT8WVKIT BT8WAKIT BT10WVKIT BT10WAKIT BT12WAKIT | 151 | 242 | 82 | | |
| BT12WVKIT BT14WVKIT BT14WAKIT BT16WVKIT BT16WAKIT BT18WVKIT BT18WAKIT | 151 | 334 | 82 | | |

If you require assistance, please contact our technical support helpline on 0370 608 9020 or email doorentry.uk.technical@legrand.com

CABLING GUIDELINES MOST COMMON CABLES

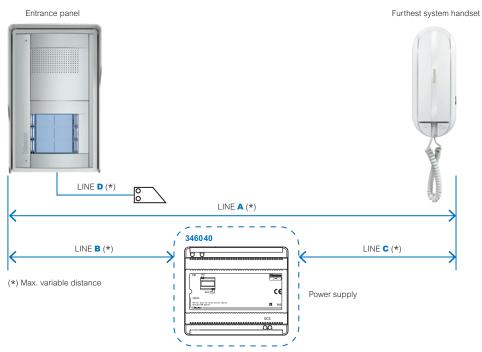


| LINE max. distance | 2 core untwisted 0·2 mm | Cat 5 single twisted pair | Telephone single twisted pair 0·28 mm | Bticino 3369 04/3369 05 | |
|-----------------------|----------------------------|---------------------------|--|----------------------------|--|
| А | 50 m | 125 m | 125 m | 200 m | |
| В | 50 m | 70 m | 70 m | 150 m | |
| С | 50 m | 75 m | 75 m | 170 m | |
| D | 10 m | 30 m | 30 m | 50 m | |


Recommended cable 3369 04/3369 05 for best performance We cannot guarantee the performance of 3rd party cable suppliers



OPTIONAL ADVANCED SETTINGS AND FEATURES

DOOR LOCK TIMING (T configuration)

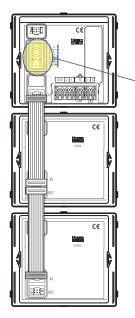

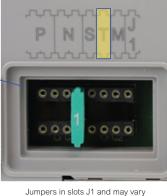

As default, the speaker module without a configurator in the "T" slot will allow the door lock to operate for 4 seconds, if a different door lock operation time is desired, you can change the door lock timing to match the table below (additional purchase of configurators may be required)

| Jumpers in slots J1 and may vary |
|---|
| depending on kit used, please see |
| p. 3 for required configuration details |

| Configurator Number | | | | | | | |
|-------------------------------|-------|-------|-------|-------|-------|--------|--|
| 0 (no configurator) | 1 | 2 | 3 | 5 | 6 | 7 | |
| 4 sec | 1 sec | 2 sec | 3 sec | 6 sec | 8 sec | 10 sec | |

For door lock times greater than 10 seconds and/or different lock requirements please contact our technical support team who would be more than happy to assist

A brand of **Carand**

TROUBLESHOOTING

System does not power up

- Check the incoming supply of the power supply is 230 V
 Check the BUS voltage on BUS terminals of all devices is 26 V DC
- Check for loose connections on the system

System powers up but does not call correctly

- Check the BUS is 26 V DC at every point, including entrance panel and internal handsets and make sure that the BUS is wired to the correct terminals on each device
- Check entrance panel and handset configurators are correct, please see the configuration guide on p. 3
- Reset the power to the system. The configuration must be done with the system powered off as the configuration only gets read into the system when it is powered up
- Check you are pressing the correct call button, please see the call button positions on p. 3 which shows the configuration positions of the call buttons
- Check the JMP configurator is correct in the J1 slot of the entrance panel as shown on p. 2 and 3, once this has been changed a power reset must be performed to read in the new configuration
- If the handset is not calling, check the ringer volume settings on the right-hand side of the internal unit to make sure the ringer volume is at a suitable level, see p. 3

Door lock is not working correctly

- Check that 12-18 V DC is on terminals S+ and S- of the entrance panel whilst the door lock button on the handsets is being pressed
- Check the door lock wiring is correct for the type of door lock you have, see p. 4
- Check the push to exit button (if installed) is a sprung return N/O push switch

System has interference

• Low voltage cabling should not be run with mains equipment, check the wiring runs are not being run along with power cables anywhere on the system

Audio low / squealing

- If you hear squealing at the entrance panel during conversation (Larson effect) this could be due to the mic and loudspeaker adjustments both being set too high causing the AV module to self amplify. Fine tune the mic and speaker until squealing stops and the desired audio level is achieved. These can be found on the front of the A/V module and adjusted using the orange adjustment tool supplied with the A/V module, see p. 3
- Low speech audio can be rectified with fine tune adjustment to the mic and loudspeaker. The settings for these are located on the front of the A/V module of the entrance panel and can be changed using the orange adjustment tool supplied with the A/V module, see p. 3

Contact details

United Kingdom

Great King Street North, Birmingham, B19 2LF

Customer Services: Tel: +44 (0) 345 605 4333 E-mail: legrand.sales@legrand.co.uk

Quotations and Technical Support: Tel: +44 (0) 370 608 9020 E-mail: doorentry.uk.technical@legrand.com

Republic of Ireland: Tel: 01 295 9673 E-mail: legrand.sales@legrand.co.uk



La legrand®

Head office (UK and Ireland): Legrand Electric Limited Great King Street North, Birmingham, B19 2LF Tel: +44 (0) 370 608 9000 Website: www.legrand.co.uk Bticino multi way door entry kits installation guide 10/2023

In accordance with its policy of continuous improvement, the Company reserves the right to change specifications and designs without notice. All illustrations, descriptions, dimensions and weights in this catalogue are for guidance and cannot be held binding on the Company. All contents and design presentation included in this publication are © Legrand Electric Limited. All rights reserved. 2023.